System Requirements

- Pentium 1 Gigahertz (GHz) processor or faster
- At least 1GB of RAM
- At least 2GB of available space on the hard disk
- USB 2.0/3.0

software only supports the following operating systems:

- Microsoft Windows Vista
- Microsoft Windows 7
- Microsoft Windows 8
- Microsoft Windows 10


If your Windows does not contain the corresponding service pack version, please perform a Windows update first.

Installing the Software

- 1. Insert the installation CD-ROM into your computer
- 2. The menu will be opened automatically (if installation doesn't start immediately, double-click Setup.exe in your CD-ROM directory).

Using the Software

1. Interface and basic functions

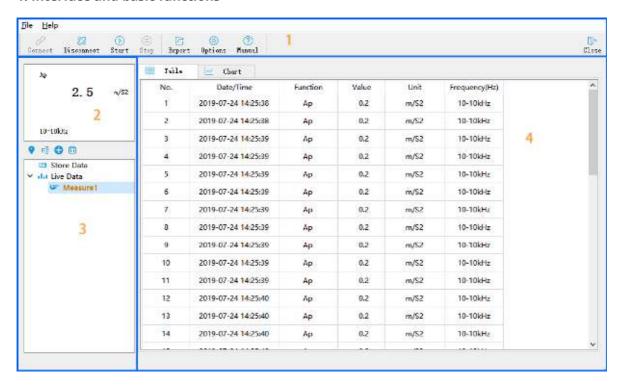

Area	Description
1	Menu and toolbar
2	Shows the live-data from the DMM
3	Data items, contain live-data and store-data
4	Data details, contain a table and a chart

2. Get live-data

Make sure the meter and computer are connected via a USB cable

- Click the Connect and the software will attempt to connect to the meter
 Click the and the software will get data from the meter
- 3. Live-data will be displayed in area 2
- 4. Data details will be saved in the form of tables and charts.


3. Get Store-Data

1. The stored-data will be saved in the "Store Data" item.



4. Export

- 1. Click the Export
- 2. Select the export project as needed. If you export to PDF, you can select a scene picture.

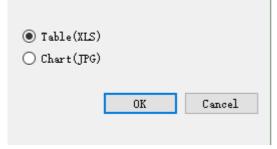

3. Input file name

5. Setup software

0k

• "Sample Points": Set the number of sampling points. If "Infinite" is checked, the number is unlimited

Cancel

- "Sample rate": Set the sampling rate. If the set rate is greater than the actual rate, the actual rate will prevail; if set to 0, the actual rate will be sampled
- "Skip repeat reading": If checked, the same sample value as the previous one is not recorded

6. Item operation

Name	Description
Set to active	Set the selected item to be activated, and the received data will be saved to this item.
Rename	Rename the selected item
New	Create a new item and set it to active
Delete	Delete the selected item


• Store-data

• Store Data

• I.i Live Data

• Measure Download

 Import1



7. Get help

• Click open the "Software user manual"